

FR GUIDE D'UTILISATION
EN USER GUIDE
ES GUÍA DE UTILIZACIÓN
NL GEBRUIKSGIDS
PT GUIA DE UTILIZAÇÃO

FOUR

OVEN
FORNO
OVEN
HORNO

De Dietrich 

CZ5703169-00

EN

DEAR CUSTOMER,

Discovering a De Dietrich product means experiencing
the range of unique emotions.

The attraction is immediate, from the moment you set eyes on the product. The sheer quality of the design shines through, thanks to the timeless style and outstanding finishes which make each component an elegant and refined masterpiece in its own right, each one in perfect harmony with the others. Next, comes the irresistible urge to touch it.

De Dietrich design makes extensive use of robust and prestigious materials, where the accent is placed firmly upon authenticity. By combining state-of-the-art technology with top quality materials, De Dietrich produces beautifully crafted products to help you get the most from the culinary arts, a passion shared by all lovers of cooking and fine food. We hope that you enjoy using this new appliance.

Thank you for choosing a De Dietrich product.

De Dietrich 

CONTENTS

EN

Description of the oven	3
The control panel.....	3
Accessories.....	6
Settings	7
Setting the clock.....	7
Changing the clock.....	7
Minute Minder.....	7
Locking the controls.....	7
Settings menu.....	7
Cooking	8
Immediate cooking.....	8
Changing the temperature.....	8
Programming the cooking time.....	8
Delayed start time.....	8
Care	9
External surface.....	9
Removing the shelf runners.....	9
Changing the catalytic liners.....	9
Installing and removing the sliding rails.....	9
Cleaning the inner glass.....	9
Removing and putting back the door.....	10
Replacing the light bulb.....	10
Anomalies and solutions	10
After-sales service	11

• 1 DESCRIPTION OF THE OVEN



1 THE CONTROL PANEL

• THE DISPLAY



- Cooking time
- End of cooking
- Keypad lock
- Minute Minder
- Temperature indicator
- Pre-heating indicator

• BUTTONS

- | | | | | | |
|--|--|--|--|---|------------------------------------|
| | | | | 1 | Setting the clock and cooking time |
| | | | | 2 | Adjusting the temperature |
| | | | | 3 | Reducing the values |
| | | | | 4 | Increasing the values |

• THE FUNCTION SELECTION KNOB (depending on model)

Pre-heat your oven empty before cooking.

Position	T°C recommended mini - maxi	Use
Zero position		The oven is switched off.
Fan oven*	180°C 35°C - 235°C	Recommended for keeping white meat, fish and vegetables moist. For cooking multiple items on up to three levels.


• 1 DESCRIPTION OF THE OVEN



Position	T°C recommended mini - maxi	Use
Combined oven	205°C 35°C - 275°C	Recommended for quiches, pies, tarts with juicy fruits, preferably in an earthenware dish.
Pulsed grill	200°C 180°C - 230°C	Roasts and poultry are juicy and crisp all over. Slide the drip tray on to the bottom shelf support. Recommended for all spit-roasted poultry or meat, for sealing and thoroughly cooking a leg or a rib of beef. To retain the moist texture of fish steaks.
Pulsed bottom	180°C 75°C - 250°C	Recommended for quiches, pies, tarts with juicy fruits, preferably in an earthenware dish.
Conventional	225°C 35°C - 275°C	Recommended for quiches, pies, tarts with juicy fruits, preferably in an earthenware dish.
ECO*	200°C 35°C - 250°C	This setting saves energy while maintaining the quality of the cooking. In this setting, pre-heating is not required.
High grill	275°C 180°C - 275°C	Recommended for grilling outlets, sausages, toasting bread and prawns placed on the grill. Cooking is done by the upper element. The high grill covers the entire shelf surface.
Medium grill	225°C 180°C - 275°C	Preheat for five minutes. Slide the drip tray into the bottom shelf to collect the grease.

1 DESCRIPTION OF THE OVEN



Position	T°C recommended mini - maxi	Use
 Keep warm	60°C 35°C - 100°C	Recommended for letting dough rise for bread, brioche, kügelhopf. Put the mould on the bottom, not exceeding 40°C (plate-warming, defrosting).
BOOSTER Booster	200°C 35°C - 275°C	To rapidly pre-heat the oven.

*Cooking mode as per standard EN 60350-1: 2016 to demonstrate compliance with requirements of the energy label of European regulation UE/65/2014.

 **Advice on how to save energy:**
Avoid opening the door during cooking to avoid heat escaping from the oven.

 **Never place tin foil directly in contact with the oven floor as the build up of heat may damage the enamel.**

2 THE LIGHT

For characteristics and to find out how to remove the light bulb, refer to the «Care» chapter.

3 SHELF RUNNERS AND LINERS

This oven has 6 shelf runners to position accessories (grill, dish, etc.) at different heights depending on the cooking mode chosen.

Behind these shelf runners there are catalytic liners (depending on model) which recover some of the grease from the cooked food. Refer to the «Care» chapter on how to replace them.

1 DESCRIPTION OF THE OVEN



4 ACCESSORIES (depending on model)

Anti-tip safety rack (fig. A).

The rack can be used to support all dishes and moulds containing food for cooking or browning. It can be used for grilling (placed directly on top).

Insert the anti-tip handle towards the back of the oven.

Multi-purpose tray, drip tray, 45 mm (fig. B).


When inserted in the shelf runners under the grill with the handle towards the oven door, it collects juice and fat from grilling, and can be used half-filled with water as a double-boiler.


Pastry dish, 20 mm (fig. C).

Insert in the shelf runners with the handle towards the oven door. Ideal for baking cookies, shortbread and cupcakes. The tilted surface makes it easier for you to put your preparations in a dish. Can also be inserted into the shelf runners under the grill to collect juice and fat from grilling.

Sliding rail system (fig.D)

The new sliding rail system makes food more practical and easier to handle as the trays can be effortlessly pulled for simpler handling. The trays can be completely removed, providing full access. Their stability ensures that food can be handled safely, reducing the risk of burns. This means that you can take food out of the oven far more easily.

 **Advice**
To avoid fumes when cooking fatty meats, we recommend you add a small amount of water or oil to the bottom of the drip pan.

 **The accessories may warp with the effect of heat, but this will not alter their function. They will return to their original shape once cooled.**

• 2 SETTINGS



SETTING THE CLOCK (fig. A)

When switching on, the display flashes at 12:00.

Set the clock with + or -. Confirm with \ominus .

If there is a power cut, the clock flashes.

CHANGING THE CLOCK (fig. B)

The function selector switch must be in the zero position.

Press \ominus ; the minute minder symbol appears \clubsuit . Press \ominus again and set the clock using + or -.

Confirm with \ominus .

MINUTE MINDER (fig. C)

This function can only be used when the oven is off.

Press \ominus .

The minute minder flashes \clubsuit . Set the minute minder with + or -.

Press \ominus to confirm. The timer will then start.

Once the time has lapsed, there is a sound signal.

To stop it, press any key.

The time appears again in the display.

NB: NB: You can modify or cancel the minute minder at any time by pressing \ominus .

To cancel, set to 00:00.

If you do not confirm, it will be saved automatically after a few seconds.

LOCKING THE CONTROLS (fig. D) - Child safety

Press + and - at the same time until the \mathfrak{L} symbol appears on the screen. To unlock, press + and - until the \mathfrak{L} symbol disappears off the screen.

SETTINGS MENU REGLAGES (fig. E)

You can adjust different settings on your oven. To do so:

Hold \ominus down until you get to the "MENU" display to access the settings mode.

Press \ominus again to scroll through the different settings.

Activate or de-activate the different parameters with + and -; see table below:

<p>Default settings</p>	<p>Sounds - beeps: Position ON, sounds active. Position OFF, no sounds.</p>
	<p>DEMO Mode: Position ON, mode active. Position OFF, normal mode.</p>

To exit the "MENU", press \ominus again.

• 3 COOKING



Before using your oven for the first time, heat it at maximum temperature while empty for approximately 30 minutes. Make sure that the room is sufficiently ventilated.

IMMEDIATE COOKING (fig. A)

The programmer must only display the time. It should not be flashing.

Turn the function selector to any position. The temperature starts to increase at once. Your oven suggests a temperature, which can be modified.

The oven heats up and the temperature indicator flashes. A series of beeps sounds when the oven has reached the programmed temperature.

CHANGING THE TEMPERATURE (fig. B)

When you are in the cooking mode of your choice, press \downarrow .

Adjust the temperature with + or -. Confirm by pressing \downarrow .

PROGRAMMING THE COOKING TIME (fig. C)

Use the immediate cooking programme, then press \ominus ; the cooking time \ominus flashes and it is now possible to set it. Press + and - to adjust the cooking time. Confirm by pressing \ominus .

Your oven has the "SMART ASSIST" function which, when programming a cooking time, will suggest a cooking time which can be modified depending on the selected cooking mode.

See the table below.

COOKING MODE	RECOMMENDATION OF COOKING TIME
FAN OVEN	30 min
COMBINED OVEN	30 min
CONVENTIONAL OVEN	30 min
PULSED BOTTOM	30 min
ECO ECO	30 min
MEDIUM GRILL	10 min
FULL GRILL	7 min
PULSED GRILL	15 min
KEEP WARM	60 min
BOOSTER BOOSTER	5 min

The cooking time is saved automatically after a few seconds. **The time starts to count down as soon as the cooking temperature is reached.**

DELAYED START (fig. D)

Proceed as for programmed cooking. After setting the cooking time, press \ominus .

The display flashes. Set the cooking end time with + and -.

The cooking end time is automatically saved after a few seconds. The cooking end time display stops flashing.

• 4 CARE



EXTERNAL SURFACE

Use a window washing product applied to a soft cloth. Do not use abrasive creams or scouring sponges.

REMOVING THE SHELF RUNNERS (fig. A) Side liners with shelf runners:

Lift the front part of the shelf runner upwards. Press the entire shelf runner and release the front hook from its housing. Then, gently pull the whole of the shelf runner towards you to release the rear hooks from their housing. Pull out the two side shelf runners.

REPLACEMENT OF THE OVEN CATALYTIC LINERS (depending on model)

This oven has a cavity with removable liners which are slotted into the shelf supports. These liners are covered with a special micro-porous enamel (catalytic enamel) with self-cleaning properties.

Dirt spreads out and is dispersed into the micro-porous holes. It is oxidised on both sides and gradually disappears.

We strongly recommend:

- That you do not scrub these catalytic liners with metallic brushes, pointed or sharp instruments.
- That you do not try to clean them with commercial scouring products.

Replace the liners when they get too dirty with new liners and fix them to the shelf runners before putting the shelf runners back.

INSTALLING AND REMOVING THE SLIDING RAILS (fig.B) (depending on model)

After removing the 2 shelf runners, choose the height (2 to 5) at which you want to fit your rails. Snap the left rail against the left shelf runner by applying enough pressure to the front and back of the rail so that the 2 tabs on the side of the rail slot into the shelf runner. Do the same for the right-hand rail.

NOTE: the telescopic sliding part of the rail must unfold towards the front of the oven, with the buffer **A** opposite you.

Insert your 2 shelf runners and then put your tray on the 2 rails. The system is now ready to use.

To remove the rails, remove the shelf runners again.

Slightly prise apart the bottom of the tabs fixed on each rail to release the shelf runner. Pull the rail towards you.

CLEANING THE INNER GLASS

To clean the inner glass, remove the door. Before doing this, remove any excess grease with a soft cloth and washing up liquid.

Warning

Do not use scouring products, abrasive sponges or metal scrapers to clean the glass oven door as this could scratch the surface and cause the glass to shatter.

• 4 CARE



REMOVING AND PUTTING BACK THE DOOR (fig. C)

Open the door fully and block it with one of the plastic wedges provided in your appliance's plastic pouch.

Remove the clipped glass panel:

Using the other wedge (or a screwdriver), press the slots **A** to unclip the glass. Remove the glass panel.

Do not soak the glass panels in water. Rinse with clean water and dry off with a lint-free cloth.

After cleaning, reposition the glass panel and fix it into the metal stops, then clip it in **with the shiny side facing outwards**. Remove the plastic wedge. Your appliance is now ready for use again.

REPLACING THE LIGHT BULB (fig. D)

Warning

Make sure the appliance is disconnected from the power before replacing the bulb in order to avoid the risk of electric shock. Carry out the operation when the appliance has cooled.

Bulb specification:

25 W, 220-240 V~, 300°C, G9.

You can replace the bulb yourself. Unscrew the view port and remove the bulb (use a rubber glove, which will make it easier to remove). Insert the new bulb and replace the view port.

• 5 ANOMALIES AND SOLUTIONS



- «AS» is displayed (Auto Stop system).

This function stops heating the oven if you forget to switch it off. Turn your oven to STOP.

- Default code starting with «F». Your oven has detected a problem.

Stop the oven for 30 minutes. If the fault is still there, cut off the power supply for at least one minute. If the fault persists, contact the Customer Service Department.

- The oven is not heating. Check that the oven is correctly connected and that your installation's fuse is not out of service. Check

that the oven is not set to «DEMO» mode (see settings menu).

- The oven light is not working. Replace the bulb or the fuse.

Check that the oven is correctly connected.


- The cooling fan continues to operate after the oven stops. This is normal. It can work for up to one hour after cooking to cool down the oven. If it continues beyond this, contact the Customer Service Department.

• 6 AFTER-SALES SERVICE



SERVICE CALLS

Any repair made to your appliance must be carried out by a qualified professional authorised to work on the brand. When you call, state your appliance's complete reference information (model, type, serial number). This information appears on the manufacturer's nameplate.

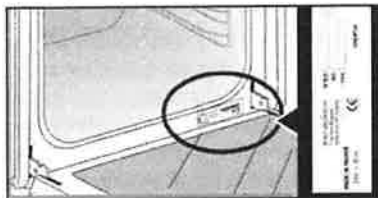

ORIGINAL PARTS

During any servicing, ask that only certified genuine replacement parts are used.

